

THE TIVO REMOTE CONTROL.

The **TiVo button** takes you to the TiVo Central screen, the starting point for all your TiVo features and settings.

If programmed, **TV PWR** turns your TV on or off.

Use **Input** to select the input (such as a DVR, DVD player, game system) your TV displays.

Back goes back to the previous screen (in certain apps).

If programmed, **Volume** and **Mute** control the volume on your TV or A/V receiver.

Search lets your search by title, actor, or keyword.

Guide takes you to the program guide, where you can find shows to watch or record. Press it again to see filtered views.

Play, Pause, Rewind, Fast-Forward or play shows in **Slow Motion**. Press Rewind and Fast-Forward up to three times for three speeds.

Replay repeats the last 8 seconds of the show. Press and hold to jump to the beginning of a show.

The **A, B, and C buttons** set options and sort and filter views.

Clear removes the display of the info banner or program guide, and deletes titles from the My Shows or To Do list.



Live TV takes you to live TV. If you're watching live TV, use it to cycle through the tuners.

Info shows the info banner while watching live TV; press it again to make it disappear.

Use **Exit** to close certain apps.

Press **Select** to choose menu items or, when watching live TV, to bring up the Mini Guide.

Use the **arrow buttons** to navigate the TiVo menus and the program guide.

Use the **Channel Up/Down** buttons to change the channel and to page up or down while in the program guide or TiVo menus.

Press **Record** to record the show you're watching, or to set up a recording for a show selected in the guide.

Advance moves forward in 30-second increments; press and hold to jump to the end of the show. Or, press Advance to jump to the next tick mark when fast-forwarding or rewinding.

Use the **Thumbs Up** and **Thumbs Down** buttons to rate shows, collections, or video providers for TiVo Suggestions.

Netflix launches the Netflix app.

Enter/Last returns you to the last channel tuned to in live TV.

* To program your TiVo remote, press the TiVo button to go to the TiVo Central screen. Then select "Settings & Messages" > "Remote, CableCARD, & Devices" > "Remote Control Setup." Follow the easy on-screen instructions.